

# Grand Lume (GL) Masts Product Manual

September 2024

### Part No: INS-GL Grand

Lume (GL) Masts

Applicable products:

- GL400
- GL520
- GL620GL720
- GL800
- GL880
- GL000
- RLH12 & RLH12/H
- RLH13
- RLH14/RLT
- RLH15
- RLH16
- RLH17

#### WE STRONGLY RECOMMEND THAT THESE INSTRUCTIONS ARE READ CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE AND MAINTAIN THIS EQUIPMENT

Phone: 01623 511 111 - Email: info@abacuslighting.com - Website: abacuslighting.com



# **Product Manual**

September 2024

1.	Safet	y	2			
2.	Instal	Installation				
	2.1.	General	3			
	2.2.	Mast Assembly	3			
3.	Opera	ation	7			
	3.1.	General	7			
	3.2.	Moving the Counterbalance	9			
	3.3.	Checks Before Use	9			
	3.4.	Fitting the Ram to the Mast	9			
	3.5.	Lowering the Mast	11			
	3.6.	Raising the Mast	12			
	3.7.	Removing the Ram(s)	14			
4.	Maint	enance	15			
	4.1.	Mast Type Identification	15			
	4.2.	Masts	16			
	4.2.1.	Every Time the Mast is Lowered	16			
	4.2.2.	Every 12 Months	16			
	4.2.3.	As Required	16			
	4.3.	Counterbalances	17			
	4.3.1.	Routine Maintenance	17			
	4.4.	Hydraulic Hoses	19			
5.	EN 10	90 Certificate of Conformity	20			
6.	CE M	arking	22			
7.	Envir	onmental Advice	23			
	7.1.	General	23			
	7.2.	Information	23			
8.	COSH	IH Hydraulic Oil Data Sheet	24			
9.	Equip	oment Classification	. 32			



# 1. Safety

# WE STRONGLY RECOMMEND THAT THESE REQUIREMENTS ARE READ CAREFULLY BEFORE ATTEMPTING TO INSTALL, OPERATE AND MAINTAIN THIS EQUIPMENT.

1.) It is essential that all operators are trained and authorised in the safe use of the counterbalance unit.

2.) It is recommended that certified operator training be carried out by Abacus personnel.

3.) The counterbalance unit must only be used for the purpose intended, as described in these operating instructions. Abacus Lighting Limited will not be held responsible for any misuse or abuse of the unit. Similarly no repair, modification or maintenance work, other than that specified in these instructions, must be carried out unless authorised by Abacus.

4.) During the lowering and raising operation the operator must ensure that all non essential personnel and members of the public are kept clear from the areas adjacent to and in front of the mast. These areas should be clearly defined and cordoned off to prevent access.

5.) It is important that hands and loose items of clothing are kept away from moving parts, both on the mast and counterbalance unit.

6.) The correct PPE must be worn at all times when operating a counterbalance unit on a raise and lower mast.

7.) Ensure the correct manual handling techniques are used at all times when lifting the unit onto or off the lighting mast.

Refer to the appropriate performance data sheet, supplied on request, for details of maximum permitted head-load weights and wind areas.

8.) The counterbalance must be visually checked, before and after use, for signs of damage or worn parts. If repairs are necessary they must be carried out prior to using the counterbalance unit. For hydraulic units it is essential that the ram be closed after use. Failure to do so could result in damage to the piston rod and seals, which in turn could compromise the safe working of the unit.

9.) It is recommended that the counterbalance unit be stored indoors when not in use.

10.) Hydraulic counterbalances incorporate the use of hydraulic oil to successfully raise and lower a range of Abacus Lighting columns and masts. Operatives should be familiar with the requirements of the relevant legislation for handling and storing hazardous products



# 2. Installation

### 2.1. General

The masts are used for sports lighting and general floodlighting applications typically from 20m up to 60m in height. Each mast is supplied in kit form for on-site assembly. The foundation bolts should be cast in concrete 3 to 4 weeks prior to erection of the mast to allow time to cure. Foundation block sizes for a variety of ground conditions can be supplied on request.

Masts are constructed from mild steel, pressed to form a series of tapering polygonal shaft sections. The shafts are slotted together and require no on site welding or bolting. The mast and foundation bolts are finished galvanised with small fasteners being from stainless steel.

In the following instructions mention is made of the minimum permissible shaft overlap distances relating to tapered octagonal shafts. In addition, because these masts are designed for specific applications it is essential that reference is made to the engineering drawings during assembly. These will give details of the shaft design overlaps. The overlaps achieved on site will vary due to manufacturing tolerances.

For shafts of 5mm or less in thickness the **minimum permissible overlap** can be determined from Fig 1.



### 2.2. Mast Assembly

Reference should be made to the illustrations which follow the text.

Before commencement of assembly examine the items and ensure that there are no missing or damaged parts. The following items of equipment will be required (not Abacus supply);

- Mobile crane to lift mast and headframe, typically 5 tonne
- 1 no. 3.0 tonne lifting equipment.



- Various wire ropes, soft slings and shackles
- Supply of liquid soap
- Ø30 steel bar or steel beam with attachment points for 'D' shackles
- Supply of timber supports and packing
- Torque multiplier and wrench

For export orders the masts will be containerised. If the smaller shafts are fitted inside larger ones, they will need to be carefully unpacked on site to avoid damaging the galvanised finish. 1. The holding down bolts are each fitted with two nuts and washers. The upper nuts and washers and template should be removed. The threads should be examined for any damage and rectified using a die nut if necessary. The nuts should be set in level plane using a steel bar and spirit level across each opposing pair of nuts. Check, referring to the counterbalance operating instructions, that the base section is fully closed and locked. Using a crane lift the column base and place over the foundation bolts and on to the lower set of nuts, ensuring the direction of lowering is as required and that the mast will clear any obstructions.

2. Fit the retaining washers and nuts to the bolts and roughly 'plumb up' the mast (levelling may be easier if only 4 levelling nuts are initially used). Referring to the appropriate operating instructions fit the counterbalance unit and lower the mast base to the horizontal.

3. Before assembly lay the shaft sections end to end on the ground and ensure by sighting from one end that the shafts are straight. Check the overlap area for any damage, excess zinc or weld which may impede fitting of the shafts together and rectify if necessary. It may be necessary to rotate one or all of the sections to achieve the best alignment. Care should be taken to ensure that seam welds on adjoining shafts are not in line.

4. Mark the minimum overlap position on the stub shaft of the mast using the method described in Fig 1. With the base section lowered, pick up, locate and slide home as far as possible the larger shaft sections. Ensure the flats do not rotate relative to each other since a shaft wedged with a corner to a flat will be very difficult to separate. Refer to Fig. 2 for details.



5 - 6. The minimum overlap distance must be covered and in most cases exceeded. To achieve this it may be necessary to mechanically pull the shafts together. For the smaller shafts this may be achieved by knocking the shaft with a hammer, ensuring that a wooden block is placed over the end of the shaft which is to be hit. Smearing liquid soap over the end of each inner shaft before assembly may also help. For the larger shaft sections, which require assembly by mechanical means it will be necessary to use a Tirfor with a pulling capacity of 3000Kg.

4 •

Phone: 01623 511 111 - Email: info@abacuslighting.com - Website: abacuslighting.com



Position the Tirfor within the side door of the mast base and attach it via a wire rope and a steel bar to the open base of the mast. Feed the Tirfor wire down the length of the two shafts being assembled and connect it to an attachment plate or bar as illustrated. Protect the shaft edges from deformation using timber packers. The Tirfor wire can then be tensioned and the shaft pulled into position whilst at the same time agitating the shaft up and down. As sliding takes place periodically sight down the assembly to check for straightness. Ensure the minimum overlap has been achieved and remove the attachment plate in readiness for pulling the next shaft into position. Remove any surplus soap from the base section. Repeat the procedure for all remaining shafts. Remove the equipment before attempting to operate the mast.

7. Fit the floodlight mounting bracket to the top shaft section and secure with the screws provided. It should be noted that the power supply cable can be installed during assembly or, if preferred, after assembly is completed, but prior to fixing the floodlighting bracket. All the electrical work should now be carried out.

8 - 9. Follow the appropriate counterbalance operating instructions and raise the mast into its vertical position and dock the lid into the base castellations. Remove and store the counterbalance unit.

After completion of assembly and with the mast raised, recheck for vertical alignment. Use the lower set of nuts to accurately 'plumb up' the column. It should be noted that the base sides are parallel, whereas the shafts are tapered. Once satisfactory all bolts should be tightened to the required torque setting;

Dolf Sine	Torque Setting (Nm)			
Boit Size	Grade 4.6	Grade 8.8		
M20	50	250		
M24	160	425		
M30	310	850		
M36	550	1450		
M42	875	2350		
M48	1300	3500		

If the gap below the flange is to be grouted it is essential that adequate provision is made for ventilation and drainage of any water collecting inside the base.

The mast can then be commissioned.

**'Plumbing up' in hot weather or climates.** To minimise the effect of the sun on one side of the mast, which can cause considerable temporary curvature of the mast it is recommended that the 'plumbing up' be carried out very early or late in the day.



# ASSEMBLY AND INSTALLATION INSTRUCTIONS FOR GRANDELUME MAST (SINGLE RAM COUNTERBALANCE SHOWN FOR CLARITY - PROCEDURES ARE THE SAME FOR TWIN UNITS)















# 3. Operation

WE STRONGLY RECOMMEND THAT THESE INSTRUCTIONS AND THE HEALTH & SAFETY REQUIREMENTS SHEET SUPPLIED WITH THE UNIT ARE READ CAREFULLY BEFORE ATTEMPTING TO OPERATE THIS EQUIPMENT.

### 3.1. General

The units consist of one, two or three double acting hydraulic rams mounted on a hand trolley or non-highway use towable trailer, which also houses the electrically driven pump unit. The rams and pump unit are permanently connected by means flexible hoses. The units have been designed to allow a safe method of attaching heavy counterbalance rams to masts without the need for manual lifting.

The counterbalances are individually colour coded, identified as such by checking the upper end of the piston rod and the upper and lower ram anchor pins, to correspond to the different grand-lume masts as detailed in the table below.

Note that the safe working load (SWL) of a counterbalance unit is dependent on the mast height and design. Further information is available from Abacus on request.

The base of the ram is fitted with a flow control valve which will allow the mast to lower at a fixed rate in the event of a major hydraulic failure such as a severed hose. The valve is of the fixed orifice type and is not adjustable.

The hydraulic circuit is fitted with 3 filters. A suction strainer is fitted inside the reservoir, a return line filter is located below the tank and a micro strainer is located inside the flow control valve poppet. All filters are adequate for the life of this unit and will only need replacing if contaminated oil has been used to refill the unit.

The pump unit is operated by an electric motor. The ram(s) are controlled by a 3 way, self centralising spool valve mounted on the motor/pump unit module. Because the spool valve is not fully leak proof, oil will slowly transfer from the rams to the tank. It is essential that any trestle used to support the shafts during maintenance is capable of carrying the load that will be transferred to it.

The unit is supplied ex works with Renolin Hydraulic Oil CL Range Ref CL46 (or equivalent) in the tank. For export the unit is supplied empty and the tank must be filled with oil before use. The correct oil level is to the centre of the gauge with the tank horizontal. Note that if this level is exceeded with the ram extended, oil will be ejected during operation of the equipment and it may also pressurise and damage the return line filter. During use the oil level of a correctly filled tank may go below the bottom of the gauge and this is quite normal. The pump incorporates a breather unit/filler port in the top of the tank and when not in use the counterbalance should be stored with the tank in an upright position to avoid leakage.



Mast	Counterbalance	Rams	Bore (mm)	Max Bar	Col. code	KG	Supply	Pin dia.
GL400	RLH12 & RLH12/H	1	127	170	Black	153	240v	38
GL520	RLH13	2	127	170	Black	183	240v	38
GL620	RLH14/RLT	2	127	340	Blue	620	2.2KW 3 ph.	55
GL720	RLH15	2	160	340	Green	1000	4.4KW 3 ph.	65
GL800 & GL880	RLH16	2	178	340	Silver	1140	4.4KW 3 ph.	75
GL 1000	<i>No picture available</i> RLH17	<i>ailable</i> Details on request						



### 3.2. Moving the Counterbalance

The RLH12, RLH12/H and RLH13 are smaller units and are designed to be moved by hand.

The RLH13 comprises two separate trolleys. The quick release couplings must be disconnected from the rams and the free end stowed on the dummy male/female couplings provided on the motor/pump unit. It is important that the rams and hoses are depressurised before separating the couplings otherwise reconnection will not be possible. To depressurise, switch off the pump motor and operate the control valve back and forth several times. Fit the upper and lower ram anchor pins to the rams and secure with the retaining pins.

The larger units are supplied with an ISO standard 50mm tow hitch to allow manoeuvring using a vehicle. THE TRAILER IS NOT DESIGNED FOR USE ON PUBLIC HIGHWAYS.

### 3.3. Checks Before Use

1 Examine the trolley framework for damage. Check that the wheels are operating and retained in position.

2 Examine the rams in particular the area around the seals for signs of damage and leakage of oil.

3 Check the oil level is to the centre of the gauge with the tank top horizontal and the rams closed.

4 Check the electrical flex on both the power lead and remote control for damage and loose connections.

5 Check the hydraulic hoses for damage and ensure that they are securely connected.

6 Check that the upper and lower ram anchor pins are the correct diameter and colour code for the mast type (see table above).

7 Connect to a suitable electric supply and switch on. Check the function of the control valve by extending the ram a short distance and the retracting it. During extension the pressure should read 200 to 300psi. The pressure during retraction will be a minimum 1500psi. As the rams fully close the pressure should rise to the relief valve pressure of 5000psi. If no pressure is noted, check that the tap under the gauge has not been turned off.

8 Check that the safety bar is present.

9 On road trailer models check the stabiliser legs and hand brake function satisfactorily. Note that the hand brake is heavily spring loaded and that to apply and release it is a two handed operation.

#### IF ANY OF THESE CHECKS ARE FAILED THE COUNTERBALANCE MUST NOT BE USED.

#### 3.4. Fitting the Ram to the Mast

Ensure the preliminary checks are completed satisfactorily before attempting to attach the ram(s) to the mast.

Single ram attachment procedure;

Connect the unit to a suitable power source either from within the mast base or via a portable generator, minimum2.5Kva. With the ram attached to the motor/pump unit as described in the previous section, switch on the power supply and remove the lower ram anchor pin. Wheel the unit up to the mast and align the ram with the ram anchor gusset on the mast.



Tilt the handles upwards and offer the lower end of the ram to the anchor gusset as indicated. Align the holes and insert the lower ram anchor pin and secure with the retaining pin provided.

With the pump unit still inclined, operate the control valve to extend the ram and allow the upper ram anchor pin to be released. Grasp the upper end of the ram and lift it towards the mast whilst simultaneously releasing the ram support/lifter bracket from the lower location bracket on the motor/pump body.



The ram is finely balanced at this position and must therefore be supported against the mast by hand to prevent it being accidentally toppled backwards.

Extend the ram until the upper end is aligned with the upper ram anchor gusset. Insert the pin and secure with its retaining pin.

Double ram attachment procedure;

When to use the brake or stabiliser legs is a matter of personal preference. As a general rule the legs are not required when fitting the rams to the mast.

Remove the upper ram anchor pins from their transit position and free the upper ends of the rams. Remove the safety bar from its transit position (upper holes), and swing the rams to the vertical. Insert the safety bar through the lower ready position holes to prevent the rams from toppling. The rams are now ready to be attached to the mast. Never attempt to swing the rams with the piston rods extended. They are very heavy and will not be balanced.

Remove the lower mast door cover. Push the counterbalance up to and around the mast with the lower ends of the rams adjacent to the lower ram anchor gussets. Operate the remote control switch to extend the rams towards the upper ram anchor gussets.

On models with two rams the rams may not extend at the same rate due to slight differences of internal friction. It is essential that the upper end of BOTH rams are extended BEYOND the holes in the upper ram anchor gussets before attempting to fit either of the upper ram anchor pins.



Retract the rams and insert upper anchor pin to the first ram and gusset to align. Ensure the pin is fully inserted with the pin handle touching the gusset. Continue to retract the rams and fit the second pin as the holes align. The first ram will begin lifting the trunnion pins from their slots on the counterbalance frame.

With both rams secured at their upper end and the trunnion pins clear of the slots, pull the safety bar from the counterbalance frame and carefully allow the lower end of the rams to swing towards the mast. Pull the counterbalance chassis rearwards away from the mast and manoeuvre to one side of the base.

Extend or retract the rams as necessary to align the lower holes and insert the lower ram anchor pins. If the horizontal axis of the lower holes through the rams is misaligned, it is possible to rotate the ram body using the safety bar as a lever whilst the ram is extending or retracting. The order in which the lower ram anchor pins are inserted is unimportant.

### 3.5. Lowering the Mast

# DO NOT ATTEMPT TO LOWER THE MAST IF THE WIND SPEED IS 30KPH (18MPH) OR GREATER.

The pivot bearing plates may be fitted with transit bolts which may be retained after installation for locking purposes. Slacken these bolts sufficiently to allow the bearing plates to rotate. The relative positions of the pivot bearing plates and the bearing lugs for various stages of the lowering and raising process are shown in the operating sequence diagram as illustrated below. Reference should be made to these sequence diagrams during operation of the mast.

Turn the bearing plate through 90° and extend the hydraulic ram(s). As the ram(s) extend, the hinged part of the mast will be observed lifting relative to the fixed part. Continue to lift until the pivot tube limits the travel of the slot behind the pivot bearing plate. Turn the pivot bearing plate a further 90° until it is pointing vertically upwards.

Retract the ram(s) to begin the lowering sequence and maintain a steady pressure on the lever of the control valve. There may be some slight vibration of the mast shaft at the commencement of lowering due to the reversal of the clearances in the pivot components and anchor pins, but this will cease very quickly provided the control valve lever is not released.

Once a smooth descent is under way, this lever can be released to stop the mast at any desired position.

When the mast is nearly horizontal, position a suitable support below the shaft at approximately 2/3 its height and on an overlap joint (see section 3.1).







### LOWERING SEQUENCE FOR DMD MASTS

### 3.6. Raising the Mast

Operate the up button of the remote control box such that the rams extend and the hinged part of the mast is raised into a vertical position. Ensure as the raising progresses that the flexible conduits do not get trapped between the fixed and hinged parts of the mast. Fully extend the rams and wait for any oscillations of the shafts to decay. Insert the safety bar through the holes in the lid side plates as illustrated.

Swing the bearing plate through 90° away from the bearing lug and reverse the control valve to retract the rams. Ensure that the castellations locate on their respective mating faces. When the castellations are fully engaged, rotate the bearing plate through a further 90° such that it is pointing vertically downwards and tighten the transit bolt.



Remove the safety bar.





### 3.7. Removing the Ram(s)

# CHECK THAT THE MAST IS PROPERLY DOCKED AND THAT THE BEARING PLATES ARE IN THEIR LOCKED POSITION.

Reposition the counterbalance in front of the mast.

As with fitting the rams to the mast, when to use the brake or stabiliser legs is a matter of personal preference. As a general rule the legs are of greatest use when attaching the rams onto the trailer since the uneven weight transfer will compress the suspension and misalign the trunnions.

Extend or retract the ram(s) such that the lower ram anchor pins come loose and can be removed (one at a time). Retract the ram(s) until they clear the lower ram anchor gussets. Pull the counterbalance up to and around the mast. Pull the lower end of the ram(s) away from the mast and insert the safety bar through the lower ready holes such that the ram(s) will be retained in a near vertical position when the ram trunnion pins are sat in their location hooks.

Extend the ram(s) and guide the trunnion pins into their location hooks. Remove the upper anchor pin of the FIRST ram to fully engage in its slots.



When the second ram is engaged in its location hook remove the upper ram anchor pin.

Fully retract both rams BEFORE removing the safety bar. Tilt the rams back to the transit position and secure their upper end to the counterbalance using the upper ram anchor pins.

Refit the safety bar to the transit position on the counterbalance and refit the lower ram anchor pins to the rams.

Lower the safety barrier to its transit position on top of the safety bar and refit the retaining pins and clips.

Switch off the electric motor and disconnect power supply.

Refit the lower door cover to the mast and secure with the retaining screw.



# 4. Maintenance

# WE STRONGLY RECOMMEND THAT THESE INSTRUCTIONS ARE READ CAREFULLY BEFORE ATTEMPTING ANY MAINTENANCE ON THIS EQUIPMENT.

### 4.1. Mast Type Identification

The masts are of galvanised steel construction typically with tapering slip joint type multisided shafts. They can be identified by measuring the width of the base at hinge level. The width, in millimetres, forms the numerical part of the product code - i.e. 400, 520, 620, 720, 800, 880 or 1000mm respectively. The illustrations below are typical arrangements of the grand-lume mast types (single and double ram variants shown).





### 4.2. Masts

Maintenance requirements are minimal but the following checks are recommended at the intervals stated.

Note that lubrication of the hinge assembly is not recommended.

### 4.2.1. Every Time the Mast is Lowered

1. Check that all external hinge components are present and undamaged before attempting to lower the mast.

2. Check that the flexible conduits are not damaged.

### 4.2.2. Every 12 Months

1. Check that all hinge components are present and undamaged.

2. Check the anti float bar is present and the screws securing it to the pivot are present and tight.

3. Check that the foundation bolts have not worked loose. The required torque settings are given in section 2.2.

4. Check that the upper and lower ram anchor gussets are not damaged.

5. Check warning label is attached to the base.

6. Check the door covers are secure and that the screw functions satisfactorily. Lightly grease the screw thread.



### 4.3. Counterbalances

### WE STRONGLY RECOMMEND THAT THESE INSTRUCTIONS ARE READ CAREFULLY BEFORE ATTEMPTING TO CARRY OUT MAINTENANCE ON THIS EQUIPMENT.

### 4.3.1. Routine Maintenance

Due to its irregular usage it is difficult to specify a periodic maintenance schedule. However we recommend that the following simple checks be carried out at 12 monthly intervals and any defective items replaced. Counterbalance units should undergo a full thorough examination and service every 50 cycles or 24 months, whichever is sooner

Check the oil level in the tank. This should be carried out with the tank as near horizontal as possible and with the rams fully closed. The oil level should be to the centre of the clear indicator panel on the tank side or to the level mark if one is provided. Tank capacity is 80 litres and should be topped up with Renolin Hydraulic Oil CL Range Ref CL46 (or equivalent). Note that If the oil level is exceeded with the rams extended, oil may be expelled from the filler cap during lowering of the column.

Examine the hydraulic hoses that link the rams to the pump unit control block and ensure that the couplings and connections are firm, intact and free from leaks. Refer to 4.4 for detailed information on hose inspection and replacement.

Check that the electrical flex and plug for damage and then connect it to the mains, ensure the same voltage is being used i.e. 110v, 240v or 415v. Check that the electric motor is running by operating the up button on the remote control box to extend the ram a short distance. Press the down button to retract the ram. Both movements up and down should be smooth and jerk free.





CAUTIONARY NOTE: ENSURE THE CORRECT MANUAL HANDLING TECHNIQUES ARE USED AT ALL TIMES.

The hydraulic ram can, if necessary be bled to remove any air that has entered the system. To do this requires the ram to be removed from the trolley and laid horizontally with the flow control valve blocks uppermost. (See cautionary note above). The procedure is as follows. First, slightly raise the top end of the ram and fully extend the piston. Second, slightly raise the flow control valve end of the rams and fully close. The ram can then be returned to the trolley.

Check that the flow control valve is functioning correctly. This is accomplished by extending the ram about 300mm then retracting it. During retraction the reading on the pressure gauge should not be less than 1500psi. The pressure will increase to the relief valve pressure of 5000psi as the end of the stroke is reached.

Ensure that the upper and lower ram anchor pins and are present and undamaged. The pins are colour coded green and are 65mm diameter. The lower pins and the upper pins are both 245mm long.



Check that the relief valve pressure is correctly set at  $5000 \pm 100$  psi, by operating the remote control unit to retract the rams when they are already fully closed. The pressure should rise quickly and stabilise at the correct value. If the reading is incorrect adjust the pressure relief valve setting as follows:-

The relief valve is located below or adjacent to the control valve. Some valves are fitted with a screwed cap which must be removed to allow the adjustment to be made. Hold the centre adjusting screw with an Allen key and slacken the locknut. With the ram fully closed, operate the control valve such that the relief valve pressure can be read on the pressure gauge.



Turn the Allen key clockwise to increase the relief valve pressure and anticlockwise to decrease it. When the correct reading has been obtained, tighten the locknut and recheck the pressure setting. Refit the screwed cap if provided.

Examine the hydraulic rams, in particular the area around the seal, for any signs of damage and oil leakage. Fully extend the piston rod of each ram in turn and check the polished surface for signs of bruising and corrosion pitting. Either will cause failure of the gland seals.

Check that the safety bar is present, undamaged and of the correct size at 30mm dia. x 1110mm long. The two retaining clips should also be present and fitted to the safety bar.

Ensure that the safety barrier is in place and undamaged. Check that the retaining pins and clips are present, undamaged and fitted correctly.

Check that the wheels on the unit are operational and retained in position. The tyres should be fully inflated to a maximum pressure of 36psi.

#### DO NOT USE THE UNIT UNLESS ALL THESE CHECKS ARE SATISFACTORY.

#### 4.4. Hydraulic Hoses

Hydraulic hoses have a finite life and must be inspected, tested and replaced in accordance with the table below;

Age	Recommendation	
Up to 3 years	Use without further testing	
3 to 5 years	Use after representative samples subjected to a proof pressure test.	
5 to 8 years	Use after representative samples subjected to proof, impulse and burst pressure tests and cold bend and electrical tests.	
Over 8 years	Scrap	



# 5. EN 1090 Certificate of Conformity

#### Certificate of Conformity of the Factory Production Control GB14/91485

In compliance with the Construction Products Regulation 2011 (retained EU law EUR 2011/305) as amended by the Construction Products (Amendment etc.) (EU Exit) Regulations 2019 and the Construction Products (Amendment etc.) (EU Exit) Regulations 2020, this certificate applies to the construction product(s)

Execution of steel structures and aluminium structures.

placed on the market under the name or trademark of

### Abacus Lighting Ltd

Oddicroft Lane Sutton in Ashfield Nottinghamshire NG17 5FT United Kingdom

and produced in the manufacturing plant(s) Abacus Lighting Ltd Oddicroft Lane Sutton in Ashfield Nottinghamshire NG17 5FT United Kingdom

has been assessed and certified as meeting the requirements of

#### EN 1090-1:2009+A1:2011

This certificate attests that all provisions concerning the assessment and verification of constancy of performance described in Annex ZA of the standard(s) under system 2+ for the performances set out above are applied and that the factory production control fulfils all the prescribed requirements for these performances.

This certificate is valid from 01 August 2022 until 01 August 2025 and will remain valid as long as the test methods and/or factory production control requirements included in the designated standard, used to assess the performances of the declared essential characteristics, do not change, and the construction product and the manufacturing conditions in the plant are not modified significantly, unless suspended or withdrawn by the factory production control certification body.

Issue 6. Certified since 06 June 2014.

Authorised by



H. Crick – UK Business Manager

5G5 United Kingdom Lld Approved Body 0120 Rossmore Business Park, Ellesmere Port, Cheshire, CH66 3EN, UK t +44 (0)151 350-6666 - www.sgs.com



uous This document is issued by the Company subject to its General Conditions of Certification Services accessible at www.sgs.comherms\_and\_conditions.htm. Attention is drawn to the finitations of liability, indemnification and jurisdictonal issues established therein. The authenticity of this document may be verified ahttp://www.sgs.com/en/certified-cients-and-products/certified-cient-directory.Any unauthorized alteration, brequery or faisification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law.



Page 1/2

20 •



Certificate of Conformity of the Factory Production Control GB14/91485, continued

# Abacus Lighting Ltd

#### EN 1090-1:2009+A1:2011

	-
Description	Execution of steel structures and aluminium structures.
Steel Type	Steel in grades: S235, S275, S355
Complementary designated Standard of Technical Requirements	EN 1090-2:2018
Execution Class	EXC2
Method of Declaration acc. to table A.1 of EN 1090-1	Method 2, 3b
Welding Process	111, 131, 141
Durability	No performance declared





This document is issued by the Company subject to its General Conditions of Certification Services accessible at www.sgs.com/terms\_and\_conditions.htm. Attention is drawn to the fimitations of liability, indemnification and jurisdictional issues established therein. The authenticity of this document may be verified attrify./www.sgs.comeniorertified-clients-and-producticertified-client.directory. Any unauthorized alteration, forgery or falsification of the content or appearance of this document is unlawful and offenders may be prosecuted to the fullest extent of the law.

Page 2/2



# 6. CE/UKCA Marking

CECA					
0120					
Abacus Lighting, Oddicroft Lane, Sutton-in- Ashfield, Nottinghamshire, NG17 5FT, UK 14					
GB14/91485, GB14/91821, GB14/91819					
EN 1090-1:2009+A1:2011					
Grand-Lum	e mast				
Tolerances:	EN1090-1				
Weldability:	S275 & S355				
Fracture toughness:	27J at 0°C				
Reaction to fire:	Class A1				
Release of cadmium:	NPD				
Emission of	NPD				
Durability: Galvanised					
Structural characteristics: Standards: Load bearing capacity: Deformation at SLS: Fatigue strength: Resistance to fire: Calculation reference: Manufacturing:	ILP PLG07 See calculations See calculations NPD NPD GL-RANGE EN1090-2: EXC2				



# 7. Environmental Advice

### 7.1. General

WE STRONGLY RECOMMEND THAT THIS ENVIRONMENTAL INFORMATION IS READ CAREFULLY BEFORE ATTEMPTING TO OPERATE AND STORE THIS EQUIPMENT.

Operatives should be familiar with the requirements of the relevant legislation for handling and storing hazardous products

### 7.2. Information

Hydraulic counterbalances incorporate the use of hydraulic oil to successfully raise and lower a range of Abacus Lighting columns and masts.

Each counterbalance unit will have an oil reservoir, whether this will be separate on a trolley (usually for raising and lower bigger masts) or on the same assembly as the hydraulic ram. Each reservoir will have a 'breather cap' on top of the tank which is required for using a hydraulic system, the breather cap will leak out oil if the unit is tipped at any point therefore it must be kept upright to prevent this from happening.

Before use ensure that all the hydraulic hoses are connected properly to prevent any spillages when in use.

If you store or use oil you should be prepared for any spillages, keeping a stock of absorbent materials and ensuring the operatives are trained to deal with any spills that may occur. If there is a spill immediate action should be done to prevent the oil from entering any drains or water courses.

If absorbents are used to combat a spill, they may well be classified as hazardous waste and should be treated as such.



Revision: 2 Jan 2019

### SAFETY DATA SHEET

# SECTION 1: Identification of the substance/mixture and of the company/undertaking

1.1 Product identifier

- Product Name: Hydraulic 22
- Product Part Number: HYD015

1.2 Relevant identified uses of the substance or mixture and uses advised against

- Use of the substance/mixture: Hydraulic Fluid

LUBRICATION SPECIA

- Use advised against: For specific application information consult
  - Technical Data Sheet

1.3 Details of the supplier of the safety data sheet

- Name of Supplier: Aztec Oils Ltd Intake Road
- Address of Supplier: Bolsover Business Park,
  - Bolsover, Derbyshire, S44 6BB, UK
- Telephone: +44 (0)1246 823007 Office hours only.
- Email: technical@aztecoils.co.uk

1.4 Emergency telephone number

- Emergency Telephone: +44 (0)1246 823007
  - Mon-Thurs 08:00 17:00 Fri 08:00 - 16:00

### **SECTION 2:** Hazards identification

- 2.1 Classification of the substance or mixture
  - CLP: Not classified
- 2.2 Label elements
  - Signal Word: Not classified
  - Hazard statements Not classified.
  - Precautionary statements Not classified.
- 2.3 Other hazards

# SECTION 3: Composition/information on ingredients

3.2 Mixtures



Hydraulic 22

Revision: 2 Jan 2019

# SECTION 3: Composition/information on ingredients (....)

- Highly refined mineral base oil mix CAS Number: Various see Section 16 EC Number: Not available. REACH Registration Number: Not availiable Concentration: <100% H Statements: Symbols: Categories:
  Phosphorodithioic acid, mixed O,O-bis(2-ethylhexyl and iso-Bu and iso-Pr) esters, zinc salts CAS Number: 85940-28-9
- CAS Number: 85940-28-9 EC Number: 288-917-4 REACH Registration Number: 01-2119521201-61-xxxx Concentration: <1.0% H Statements: H315, H318, H411 Symbols: Categories: Skin Irrit. 2, Eye Dam. 1

## SECTION 4: First aid measures

- 4.1 Description of first aid measures
  - Inhalation

If inhaled, remove from area to fresh air. Get medical attention if respiratory irritation develops or if breathing becomes difficult.

- Contact with eyes

In case of contact, immediately flush eyes with plenty of water for at least 15 minutes. Eyelids should be held away from the eyeball to ensure thorough rinsing. Check for and remove any contact lenses (if easy to do so). Get medical attention.

- Contact with skin

Wash skin thoroughly with soap and water or use recognised skin cleanser. Remove contaminated clothing and shoes. Wash clothing before reuse. Clean shoes thoroughly before reuse. Get medical attention if symptoms occur.

- Ingestion

Do not induce vomiting unless directed to do so by medical personnel. Get medical attention if symptoms occur.

- 4.2 Most important symptoms and effects, both acute and delayed
  - See Section 11 for more detailed information on health effects and symptoms.
- 4.3 Indication of any immediate medical attention and special treatment needed
  - Treatment should be symptomatic and directed to relieving any effects.



Tel: +44 (0) 1246 823007 • Email: sales@aztecoils.co.uk www.aztecoils.co.uk

Hydraulic 22

Revision: 2 Jan 2019

### **SECTION 5:** Firefighting measures

- 5.1 Extinguishing media
  - Extinguishing media: Extinguish with foam, carbon dioxide, dry powder or water fog. Unsuitable extinguishing media: Do not use water jet as an extinguisher, as this will spread the fire.
- 5.2 Special hazards arising from the substance or mixture
  - If heated or in cases of fire, pressure in a vessel will increase and container may burst.
  - Combustion products may include: carbon oxides (CO, CO2) (carbon monoxide, carbon dioxide), metal oxide/ oxides, phosphorous oxides and sulphur oxides (SO, SO2, etc..)
- 5.3 Advice for firefighters
  - Promptly isolate and secure the scene, remove all unnecessary and untrained persons from the vicinity if there is a fire.

Fire-fighters should wear appropriate protective equipment and self-contained breathing apparatus (SCBA) with a full face-piece operated in positive pressure mode.

Clothing for fire-fighters (including helmets, protective boots and gloves) conforming to European Standard EN 469 will provide a basic level of protection for chemical incidents.

### **SECTION 6:** Accidental release measures

#### Spillage causes slippery surface

6.1 Personal precautions, protective equipment and emergency procedures

- Stop any leak if it is safe to do so.
- Absorb with sand or other inert absorbent. Collect in containers and seal securely.
- Adopt best manual handling considerations when handling, carrying and dispensing.
- Appropriate protective equipment must be worn when handling a spill of this material. See SECTION 8, Exposure Controls/Personal Protection, for recommendations. If exposed to material during clean-up operations, see SECTION 4, First Aid Measures, for actions to follow.
- 6.2 Environmental precautions
  - Do not discharge into drains, water courses or onto the ground. Contain spillages with sand, earth or any suitable adsorbent material.
- 6.3 Methods and material for containment and cleaning up
  - Stop any leak if it is safe to do so.
  - Absorb into dry earth or sand. Transfer to a closable, labelled salvage container for disposal by an appropriate method.
  - Dispose of in compliance with all local and national regulations.

#### 6.4 Reference to other sections

See Section 1 for emergency contact information.
 See Section 5 for firefighting measures.
 See Section 8 for information on appropriate personal protective equipment.
 See Section 12 for environmental precautions.
 See Section 13 for additional waste treatment information.



Tel: +44 (0) 1246 823007 • Email: sales@aztecoils.co.uk www.aztecoils.co.uk

Hydraulic 22

Revision: 2 Jan 2019

# SECTION 7: Handling and storage

7.1 Precautions for safe handling

- Use appropriate personal protective equipment.
- Eating, drinking and smoking should be prohibited in areas where this material is handled, stored and processed. Wash thoroughly after handling. Remove contaminated clothing and protective equipment before entering eating areas. See also Section 8 for additional information on hygiene measures.
- 7.2 Conditions for safe storage, including any incompatibilities
  - Store in accordance with local regulations.
  - Keep in a cool, dry, well ventilated area. Keep containers tightly closed. Store in correctly labelled containers.
- 7.3 Specific end use(s)
  - The identified uses for this product are detailed in Section 1.2.

## SECTION 8: Exposure controls/personal protection

8.1 Control parameters

### Substances

Chemical Name	WEL (short term)	WEL (long term)
Highly refined mineral base oil mix	-	5mg/m3

- If this product contains ingredients with exposure limits, personal and/or workplace atmosphere monitoring may be required to determine the effectiveness of the ventilation or other control measures and/or the necessity to use respiratory protective equipment.
- 8.2 Exposure controls



- Engineering Controls
- Appropriate Engineering Control:

All activities involving chemicals should be assessed for their risks to health, to ensure exposures are adequately controlled.

Personal protective equipment should conform to appropriate standards, be suitable for use, be kept in good condition and properly maintained.

No special requirements under ordinary conditions of use and with adequate ventilation.

Eye Protection:

If contact is likely, safety glasses are recommended.

- Hand Protection
- As specific work environments and material handling practices vary, safety procedures should be developed for each intended application. The correct choice of protective gloves depends upon the chemicals being handled and the conditions of work and use. Recommended: Nitrile or other suitable glove. Breakthrough time represents how long a glove can be expected to provide effective permeation resistance. Always consult with your glove supplier for up-to-date technical information on breakthrough.



Hydraulic 22

Revision: 2 Jan 2019

### SECTION 8: Exposure controls/personal protection (....)

- Skin and Body Protection
   Wear appropriate clothing as protection against splashing.
   In accordance with good industrial hygiene practices, precautions should be taken to avoid skin contact.
- Hygiene Measures
   Always observe good personal hygiene measures, such as washing after handling the material and before eating, drinking and/or smoking.
   Routinely wash work clothing and protective equipment to remove contaminants.
   Respiratory Protection
- No Special requirements under ordinary conditions of use and with adequate ventilation.

## **SECTION 9:** Physical and chemical properties

9.1 Information on basic physical and chemical properties

- Appearance: Amber Liquid
- Odour: Characteristic.
- Density: 0.845 at 15°C
- Viscosity (kinematic): 22.6cSt at 40°C
- Viscosity (kinematic): 4cSt at 100°C
- Freezing point/Range: No data available.
- Boiling Point/Range: No data available
- Flashpoint: >100°C
- Oxidising Properties: No information available
- Autoignition Temperature: No information available
- 9.2 Other information
  - The figures in this section are for guidance only please always use them in conjunction with the technical data sheet.

## SECTION 10: Stability and reactivity

- 10.1 Reactivity
  - No specific test data available for this product. Refer to, conditions to avoid and incompatible material sections for additional information.
- 10.2 Chemical stability
  - Considered stable under normal conditions
- 10.3 Possibility of hazardous reactions
  - None under normal processing.
  - Hazardous polymerisation does not occur.
- 10.4 Conditions to avoid
  - Avoid heat, flames and other sources of ignition.
- 10.5 Incompatible materials
  - Reactive or incompatible with the following materials: oxidizing materials.
- 10.6 Hazardous decomposition products



Hydraulic 22

Revision: 2 Jan 2019

# SECTION 10: Stability and reactivity (....)

- Under normal conditions of storage and use, hazardous decomposition products should not be produced

# **SECTION 11:** Toxicological information

11.1 Information on toxicological effects

- Potential acute health effects.
   Inhalation may cause irritation to the respiratory tract.
   Ingestion: May cause nausea and diarrhoea.
   Skin contact: Defatting to the skin. May cause skin dryness and irritation.
   Eye contact: No known significant effects or critical hazards.
   No other specific data and information available.
- Potential chronic health effects No known significant effects or critical hazards.

# **SECTION 12:** Ecological information

- 12.1 Toxicity
  - Not classified as dangerous
- 12.2 Persistence and degradability
  - Not readily biodegradable.
- 12.3 Bioaccumulative potential
  - No data available.
- 12.4 Mobility in soil
  - Immiscible with water.
- 12.5 Results of PBT and vPvB assessment
  - PBT: Not applicable.
     vPvB: Not applicable.
- 12.6 Other adverse effects
  - Spillages may form an oil layer on water surfaces causing physical damage to organisms. Oxygen transfer may also be impaired.

## SECTION 13: Disposal considerations

- 13.1 Waste treatment methods
  - Dispose of in compliance with all local and national regulations.
- 13.2 Classification
  - This material and its containers must be disposed of as controlled waste. Dispose of waste via a licensed waste disposal contractor.



Tel: +44 (0) 1246 823007 • Email: sales@aztecoils.co.uk www.aztecoils.co.uk

Hydraulic 22

Revision: 2 Jan 2019

## SECTION 14: Transport information

- 14.1 UN number
  - UN No.: Not regulated.
- 14.2 UN proper shipping name
  - Proper Shipping Name: Not applicable.
- 14.3 Transport hazard class(es)
  - Hazard Class: Not applicable.
- 14.4 Packing group
  - Packing Group: Not applicable.
- 14.5 Environmental hazards
  - Not classified.
- 14.6 Special precautions for user
  - Not available.
- 14.7 Transport in bulk according to Annex II of Marpol and the IBC Code
  - Not available.

### **SECTION 15:** Regulatory information

- 15.1 Safety, health and environmental regulations/legislation specific for the substance or mixture
  - Regulation (EC) No 1907/2006 of the European Parliament and the Council of 18 December 2006 concerning the Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) (as amended).
  - Regulation (EC) No 1272/2008 of the European Parliament and the Council of 16 December 2008 on classification, labelling and packaging of substances and mixtures (as amended).
- 15.2 Chemical safety assessment
  - A chemical safety assessment (CSA) for this product has not yet been completed

### **SECTION 16:** Other information

Text not given with phrase codes where they are used elsewhere in this safety data sheet:- H315: Causes skin irritation. H318: Causes serious eye damage. H411: Toxic to aquatic life with long lasting effects.

May contain one or more of the following: 101316-69-2 / RRN 01-2119486948-13, 101316-70-5,101316-71-6, 101316-72-7 / RRN 01-2119489969-06, 64741-88-4 / RRN 01-2119488706-23, 64741-89-5 / RRN 01-2119487067-30, 64741-95-3 / RRN 01-2119487081-40, 64741-96-4/ RRN 01-2119483621-38, 64741-97-5 / RRN 01-2119480374 -36, 64742-01-4 / RRN 01-2119488707-21, 64742-44-5 / RRN 01-2119985177-24, 64742-45-6, 64742-52-5 / RRN 01-2119467170-45, 64742-53-6 / RRN 01-2119480375-34, 64742-54-7 / RRN 01-2119484627-25, 64742-55-8 / RRN 01-2119487077-29, 64742-56-9 / RRN 01-2119480132-48, 64742-57-0 / RRN 01-2119489287-22, 64742-58-1, 64742-62-7 / RRN 01-2119480472-38, 64742-63-8, 64742-64-9, 64742-65-0 / RRN 01-2119471299-27, 64742-70-7 / RRN 01-2119487080-42, 72623-85-9 / RRN 01-2119555262-43, 72623-86-0 / RRN 01-2119474878-16, 72623-87-1 / RRN 01-2119474889-13, 74869-22-0 / RRN 01-2119495601-36, 90669-74-2 / RRN 01-2119970171-43



Tel: +44 (0) 1246 823007 • Email: sales@aztecoils.co.uk www.aztecoils.co.uk

Hydraulic 22

Revision: 2 Jan 2019

# SECTION 16: Other information (....)

Disclaimer

The information supplied in this Safety Data Sheet is designed only as guidance for the safe use,

storage and handling of the product. This information is correct to the best of our knowledge and

belief at the date of publication however no guarantee is made to its accuracy. This information

relates only to the specific material designated and may not be valid for such material used in

combination with any other materials or in any other process

--- end of safety datasheet ---



# 8. Equipment Classification

From the information provided by HSE in 2011, hinged masts are clearly excluded from LOLER and are not considered Lifting Equipment, however, where they are provided as work equipment, employers must comply with the requirements of PUWER as well as the other legislation.

PUWER requires that all work equipment, which includes both the hinging mast and the hydraulic ram and power pack to be periodically subject to a thorough inspection by a competent person and that any necessary maintenance is completed to ensure that the equipment can be used safety.

Records of inspection and maintenance of both the hinged masts and the hydraulic ram and power pack should be maintained and should be checked to ensure they are up to date before operating the hinged masts.

# 9. Abacus Lighting Recycling Statement:

This product is primarily made from mild steel, which makes it easily recyclable through scrap metal recycling processes. Recycling mild steel helps reduce waste and conserve natural resources, contributing to a more sustainable environment.